



READ BEFORE USE



BS&B SAFETY SYSTEMS, L.L.C.
BS&B SAFETY SYSTEMS, LTD.

Installation Instructions

77- 4008AI

Visit www.bsbsystems.com or
www.bsbsystems.com for the latest updates.

GFR-S™ & GLR-S™ Rupture Disks GR-C™ Safety Head

Warning: Rupture disks are intended to provide a pressure relief opening. This rupture disk is designed to burst at a specified temperature and pressure, thereby relieving excess pressure or preventing excessive vacuum in a system. It is imperative that this rupture disk be properly installed and safely vented in order to avoid bodily injury, damage to property, pollution and loss of product. BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. supply disks selected by their customers, which are manufactured in reliance upon information and specifications supplied by the customer. BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. are not liable for any damage resulting from improper installation, improper system design, unsafe venting, or other factors beyond BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. control. Do not locate the rupture disk device where personnel, equipment or property will be exposed to released product and pressure through the disk. Handle carefully, disk and tag may have sharp edges.

Order Replacement Disk by Lot Number (Shown on disk tag) Before you install a Rupture Disk

Inspect Safety Head

1. Inspect Safety Head's mating surfaces for foreign material. Pits, dirt or grit can damage the rupture disk affecting disk performance or cause leakage. If surfaces are rough, polish with a fine emery cloth. Clean if necessary. Do not machine, safety head dimensions are critical.
2. The safety head size and rating must match the companion flange size and rating. The rupture disk burst pressure must not exceed the safety head and flange rating. Safety head and rupture disk materials should be compatible with your process. Ensure that appropriate adjustments are made for temperature when reviewing flange rating compatibility.
3. The rupture disk and safety head must not be machined or modified in any way except with the approval of BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. Failure to obtain such approval voids the warranty on this product.

Inspect Pipe Ferrules

1. Clean seating surfaces of both ferrules before installing the assembly.

Inspect the Pipe Flanges

1. Ensure that the pipe flanges are parallel to a sufficient standard that will permit proper function of both the rupture disk device and the chosen pipe flange to safety head gaskets

Inspect the Rupture Disk

1. Handle the rupture disk carefully holding the disk by the tag and the perimeter only. Examine both sides of the disk, checking the seating and domed surfaces for nicks, dents, scratches and foreign material, which can damage the disk, cause leakage or affect the burst pressure. Do not install a damaged disk. Installation of a damaged disk may result in a premature bursting of the disk. If damaged, the type GFR-S™ disk will open at a maximum of 1.0 times the marked burst pressure and the GLR-S disk will open at a maximum of 1.5 times the marked burst pressure. This is called the damage safety ratio. Trained and qualified personnel must carry out the installation of the rupture disk.

Note: Corrosion and process conditions may deteriorate disk performance and necessitate frequent replacement.

Safety Precautions

- Consider recoil. Provide adequate support for piping and connections to absorb recoil/reaction forces when the disk ruptures. Recoil is the force the system will experience upon disk rupture. Recoil (lbs.) is approximately twice the disk rating (psig) times the relief area (in.2).
- Do not remove rupture disks or safety heads from packaging for inspection until ready to install unless the package is damaged.
- The rupture disk and safety head should not be subjected to excessive structural bending stresses.
- If disks are liquid cleaned, and a high velocity coarse particle spray or jet is used, be careful not to damage the disk.
- Do not locate the disk where it may be subjected to thermal shock. Moisture, rain, condensation or snow may cause a thermal shock to the disk causing the disk to burst below its marked burst pressure. A protector is recom-

mended for temperature above 212° F (100° C), consult BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd.

- When the disk ruptures, the resulting shock wave may affect the operating performance of downstream equipment.
- Do not reinstall a disk that has been removed from the piping system unless used in a pretorqued safety head, even if the disk has not ruptured. When stresses in the disk are relieved by unbolting, the disk can never resume its original installed condition, which can affect disk performance if reinstalled.

Only pretorqued safety heads with the contained rupture disk may be removed from service and re-installed provided the pretorqued capscrews are not removed and the disk is in good condition.

Assemble Rupture Disk in GR-C, FM-C, FT-C, FX-C, or Between Standard Ferrules (See Figures 1 through 4)

1. Arrange safety head outlet in position shown.
2. Place undamaged rupture disk on inlet fitting. The convex side of the disk, the dome, faces the inlet.**
3. Carefully place safety head outlet in position shown in Figures 1 through 4. Ensure that the disk gasket's larger seal bead (types GFR-S, GFR-SE, GFR-SS and GLR-S) mates properly with the outlet groove.

Ensure flow arrows on the disk tag end on the safety head outlet point in the same direction.

In case of type GFR-SM and GFR-SMS, the seal bead has a symmetric gasket configuration on both sides of the disk and fits between standard Tri-Clamp (or equivalent) ferrules.

4. Assemble unit with sanitary clamp. Ensure sealing of rup-

Rupture Disk and Safety Head Types	
Rupture Disk Types	Safety Head Types
GFR-S	GR-C
GFR-SS	GR-C
GFR-SM	Between standard ferrules
GFR-SMS	Between standard ferrules
GFR-SE	FM-C, FT-C, FX-C
GLR-S	GR-C, FM-C, FT-C, FX-C

ture disk in safety head by applying the torque value to the hexagon nut (or steel bolts in Tri-Clamp MHP model) provided with the Tri-Clover clamp. Hexagon nuts are available from BS&B Safety Systems, Inc or BS&B Safety Systems Ltd.

GFR-S, GFR-SS, GFR-SM, GFR-SMS, GFR-SE			
Nominal Disk Size		Torque*	
IN	MM	IN. LBS.	NM
1	25	40	4.5
1.5	40	40	4.5
2	50	70	7.9
3	80	75	8.5
* Tri-clamp 13 MHHS clamp is recommended with a hexagonal nut for these torque values.			

** The 1" GFR disk has a different appearance than the other larger sizes. When viewed from the process side, the 1" GFR has a concave interior dome inside the score. The outer frustum area between the scoreline and gasket is still convex in shape.

GLR-S Torque					
Nominal Disk Size		GLR-S Torque*			
		Operating Temperature			
		Below 100° F		Above 101° F	
IN	MM	IN. LBS.	NM	IN. LBS.	NM
1.5	40	180	13.5	180	13.6
* Tri-clamp 13 MHP clamp is recommended with stainless steel bolts for these torque values.					

Figure 1
GR-C Safety Head with GFR-S Rupture Disk

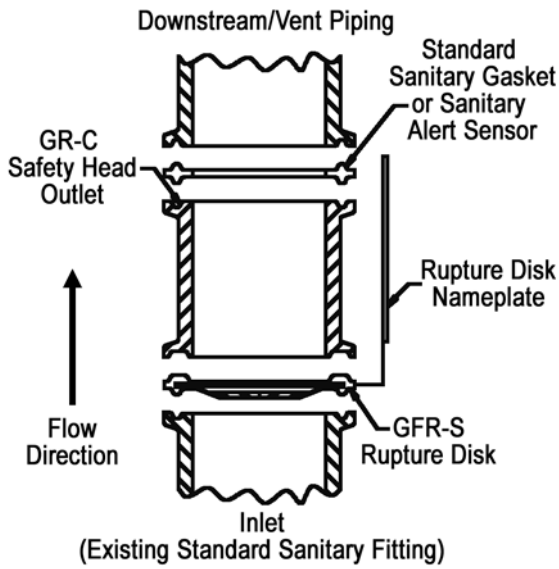


Figure 2
FM-C Safety Head with GFR-SE Rupture Disk

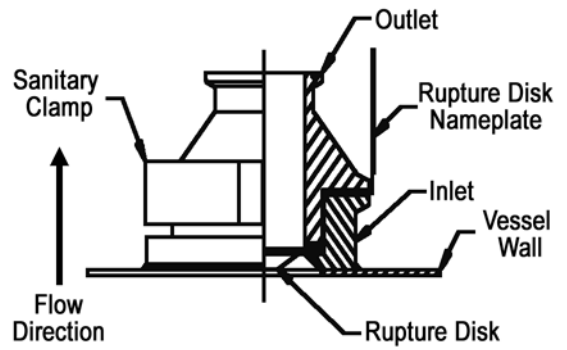


Figure 3
FT-C Safety Head with GFR-SE Rupture Disk


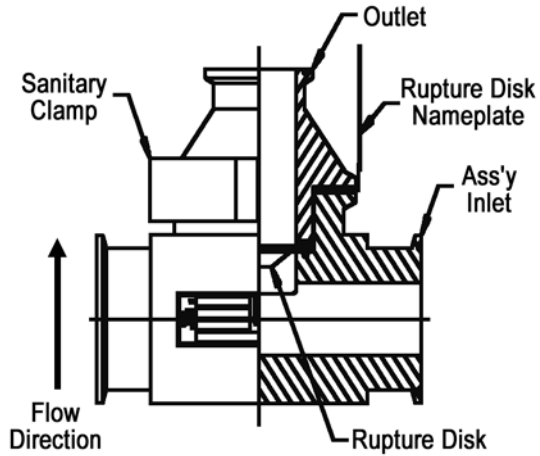


Figure 4
FX-C Safety Head with GFR-SE Rupture Disk

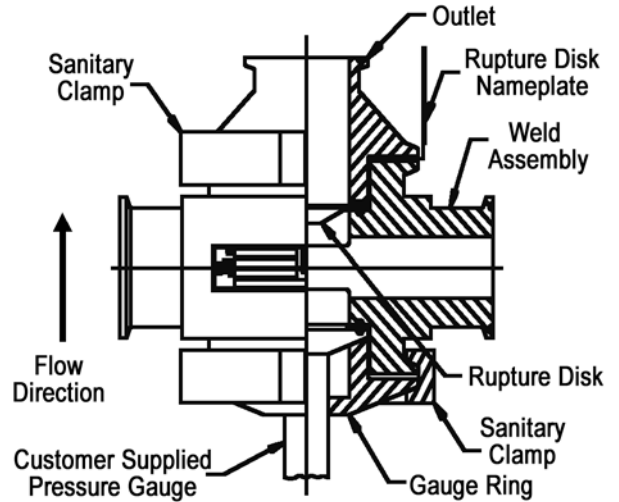

Limitations of Warranties – BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. warrants their products, when properly installed, used and maintained by the original purchaser, against defective workmanship and materials for a period of twelve (12) months from the date of shipment. Purchaser’s failure to use this product in strict compliance with all material operating specifications provided to BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. by purchaser prior to BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. production or shipment of this product shall void this warranty. Rupture disks are warranted solely to burst within specified pressure ranges at temperatures specified at the time of sale.

Where pressure relief or other products used by Buyer involve multi-part assemblies, each part must be manufactured by BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. specifically disclaim any warranties and any and all liability for damages, either direct or indirect, incidental or consequential, arising from the use of rupture disk assemblies (e.g. rupture disk and rupture disk holder), explosion vent assemblies (e.g. vent and safety frame) or other assemblies not wholly comprised of BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. manufactured products.

BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. do not warrant any article not manufactured by BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. do not warrant this product against loss or damage caused directly or indirectly by improper pressure relief system design; by the improper use, maintenance or installation (including improper torque) of this product; or by corrosion erosion or malfunction caused by acids, chemicals, fumes, rust, dirt, debris, thermal shock, shock waves or other external agencies over which BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. have no control.

THE EXPRESSED WARRANTIES HEREIN GIVEN ARE EXCLUSIVE AND IN LIEU OF ALL WARRANTIES EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BUYER’S SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY SHALL BE, AT BS&B Safety Systems, L.L.C. OR BS&B SAFETY SYSTEMS LTD. OPTION, THE REPAIR OR REPLACEMENT OF THE PRODUCT, F.O.B. TULSA, OKLAHOMA, OR LIMERICK, IRELAND.

Liability Limitations – BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. manufacture and supply their products in reliance upon information and specifications provided by its customers. BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. specifically disclaim any and all liability, of whatever nature, resulting or arising from Buyer’s failure to disclose fully all material operating conditions, design parameters, process components, or system or vessel requirements, or from any misrepresentations or omissions by Buyer, Buyer agrees to indemnify and hold harmless BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. for all costs, loss, liability or damage arising or resulting from BS&B Safety Systems, L.L.C. or BS&B Safety Systems Ltd. manufacture or supply of this product in accordance with Buyer’s specifications or requirements.

BS&B Safety Systems, L.L.C. OR BS&B SAFETY SYSTEMS LTD. AGGREGATE TOTAL LIABILITY TO BUYER FOR ANY AND ALL LOSS OR DAMAGE ARISING OUT OF BUYER’S USE OF, OR INABILITY TO USE, THE PRODUCT SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT OR \$1,000.00, WHICHEVER IS LESSER, BS&B Safety Systems, L.L.C. OR BS&B SAFETY SYSTEMS LTD. SHALL NOT BE LIABLE FOR PERSONAL INJURY OR PROPERTY DAMAGE ARISING OUT OF BUYER’S PURCHASE, INSTALLATION OR USE OF THE PRODUCT, AND IN NO EVENT SHALL BS&B Safety Systems, L.L.C. OR BS&B SAFETY SYSTEMS LTD. BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES RESULTING FROM ANY SUCH CAUSES.

BS&B SAFETY SYSTEMS, L.L.C.
7455 East 46th Street
Tulsa, OK 74145
Telephone: 918-622-5950
Facsimile: 918-665-3904
Email: sales@bsbsystems.com
www.bsbsystems.com



BS&B SAFETY SYSTEMS, L.L.C.
BS&B SAFETY SYSTEMS, LTD.

BS&B SAFETY SYSTEMS, LTD.
Raheen Business Park
Raheen, Limerick, Ireland
Telephone: +353 61 227022
Facsimile: +353 61 227987
Email: sales@bsb.ie
www.bsb.ie



BS&B Safety Systems, L.L.C. and BS&B Safety Systems Ltd. are here to assist you in providing a safe and efficient work place. For assistance on installation, audits, training or technical advice, please contact our Customer Service Department.